## You'll be amazed where you bump into us

**INFRASTRUCTURE & ENVIRONMENT** 

**NEW BUSINESS DEVELOPMENT** 

**HORTICULTURE & AGRICULTURE** 

**PONDS** 




**Delivered material in crates** 





**Arrival Dealer and Genap** 



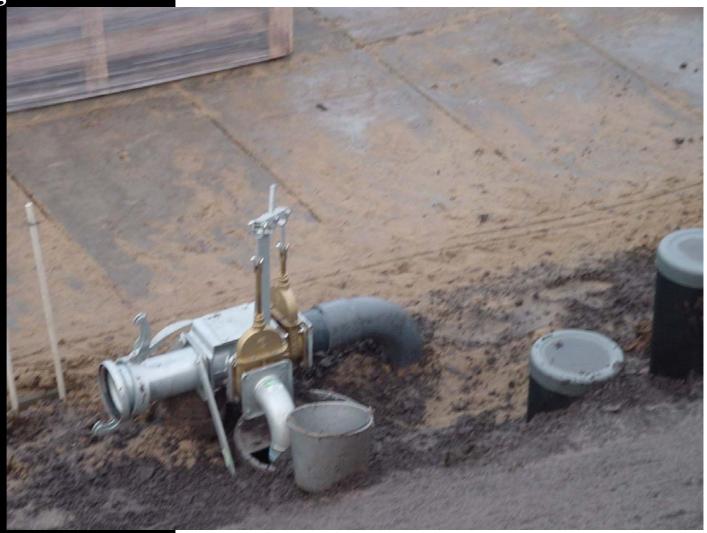

Filling station with in- and outlet piece





Drainage






Drainage





**Instructions on the crate** 



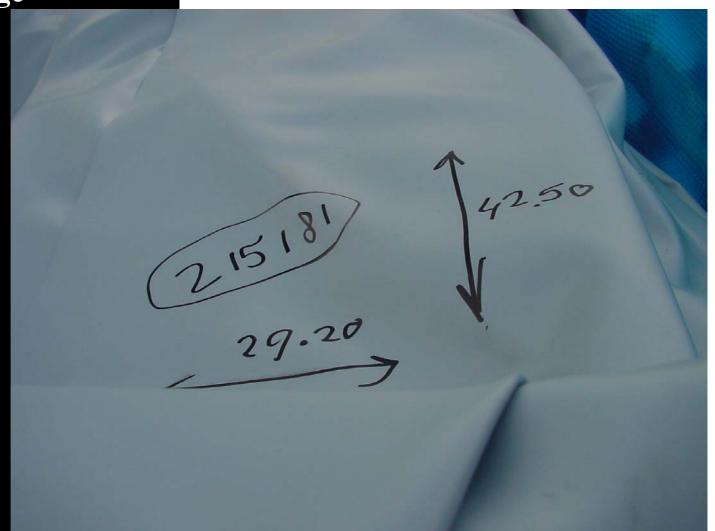

Unfolding instructions for the liner





**Degassing–floating cushion and accessories** 





Unloading the Fecatex sheet from the crate





Unloading the Fecatex sheet from the crate





**Assistance of helping hands** 





**Assistance of helping hands** 





Unfolding the sheet, under supervision of Genap





Unfolding the sheet, under supervision of Genap





Fasten the sheet in the bank / V-shaped trench





Install gas drainage between the two sheets





Connect drain to the degassing pipe





**Clamp flange with throttle cap for inlet - outlet of slurry** 





Preparation for connections clamp flange and throttle cap





**Sealing the Genatex 850-flap to the bottom liner** 






Placing the floating cushion on top of the clamp flange with throttle cap





Detail picture of connection of the cover sheet to the floating cushion



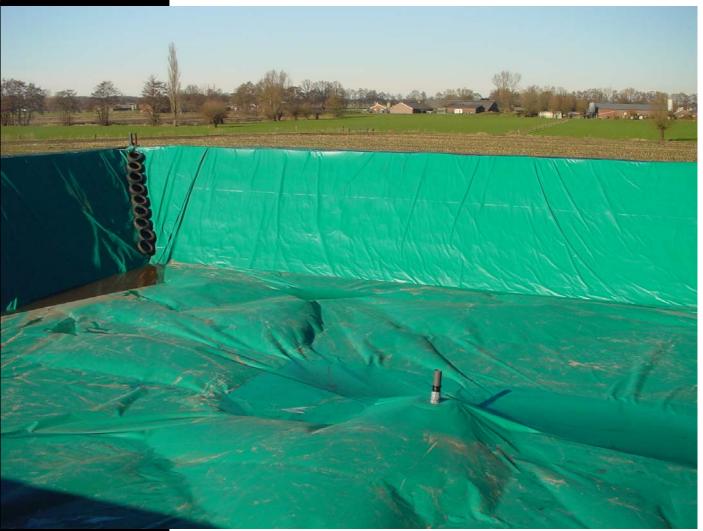

**Top sheet and connection to the floating cushion** 





Finished reservoir with bank protection





**Detail picture of stitched corner** 





Complete reservoir: Fecatex bottom sheet including Genatex 850 green cover sheet and bank protection



